




**boa® Important things to know
and some helpful assembly tips**



■ **Calculation of the rope length:**

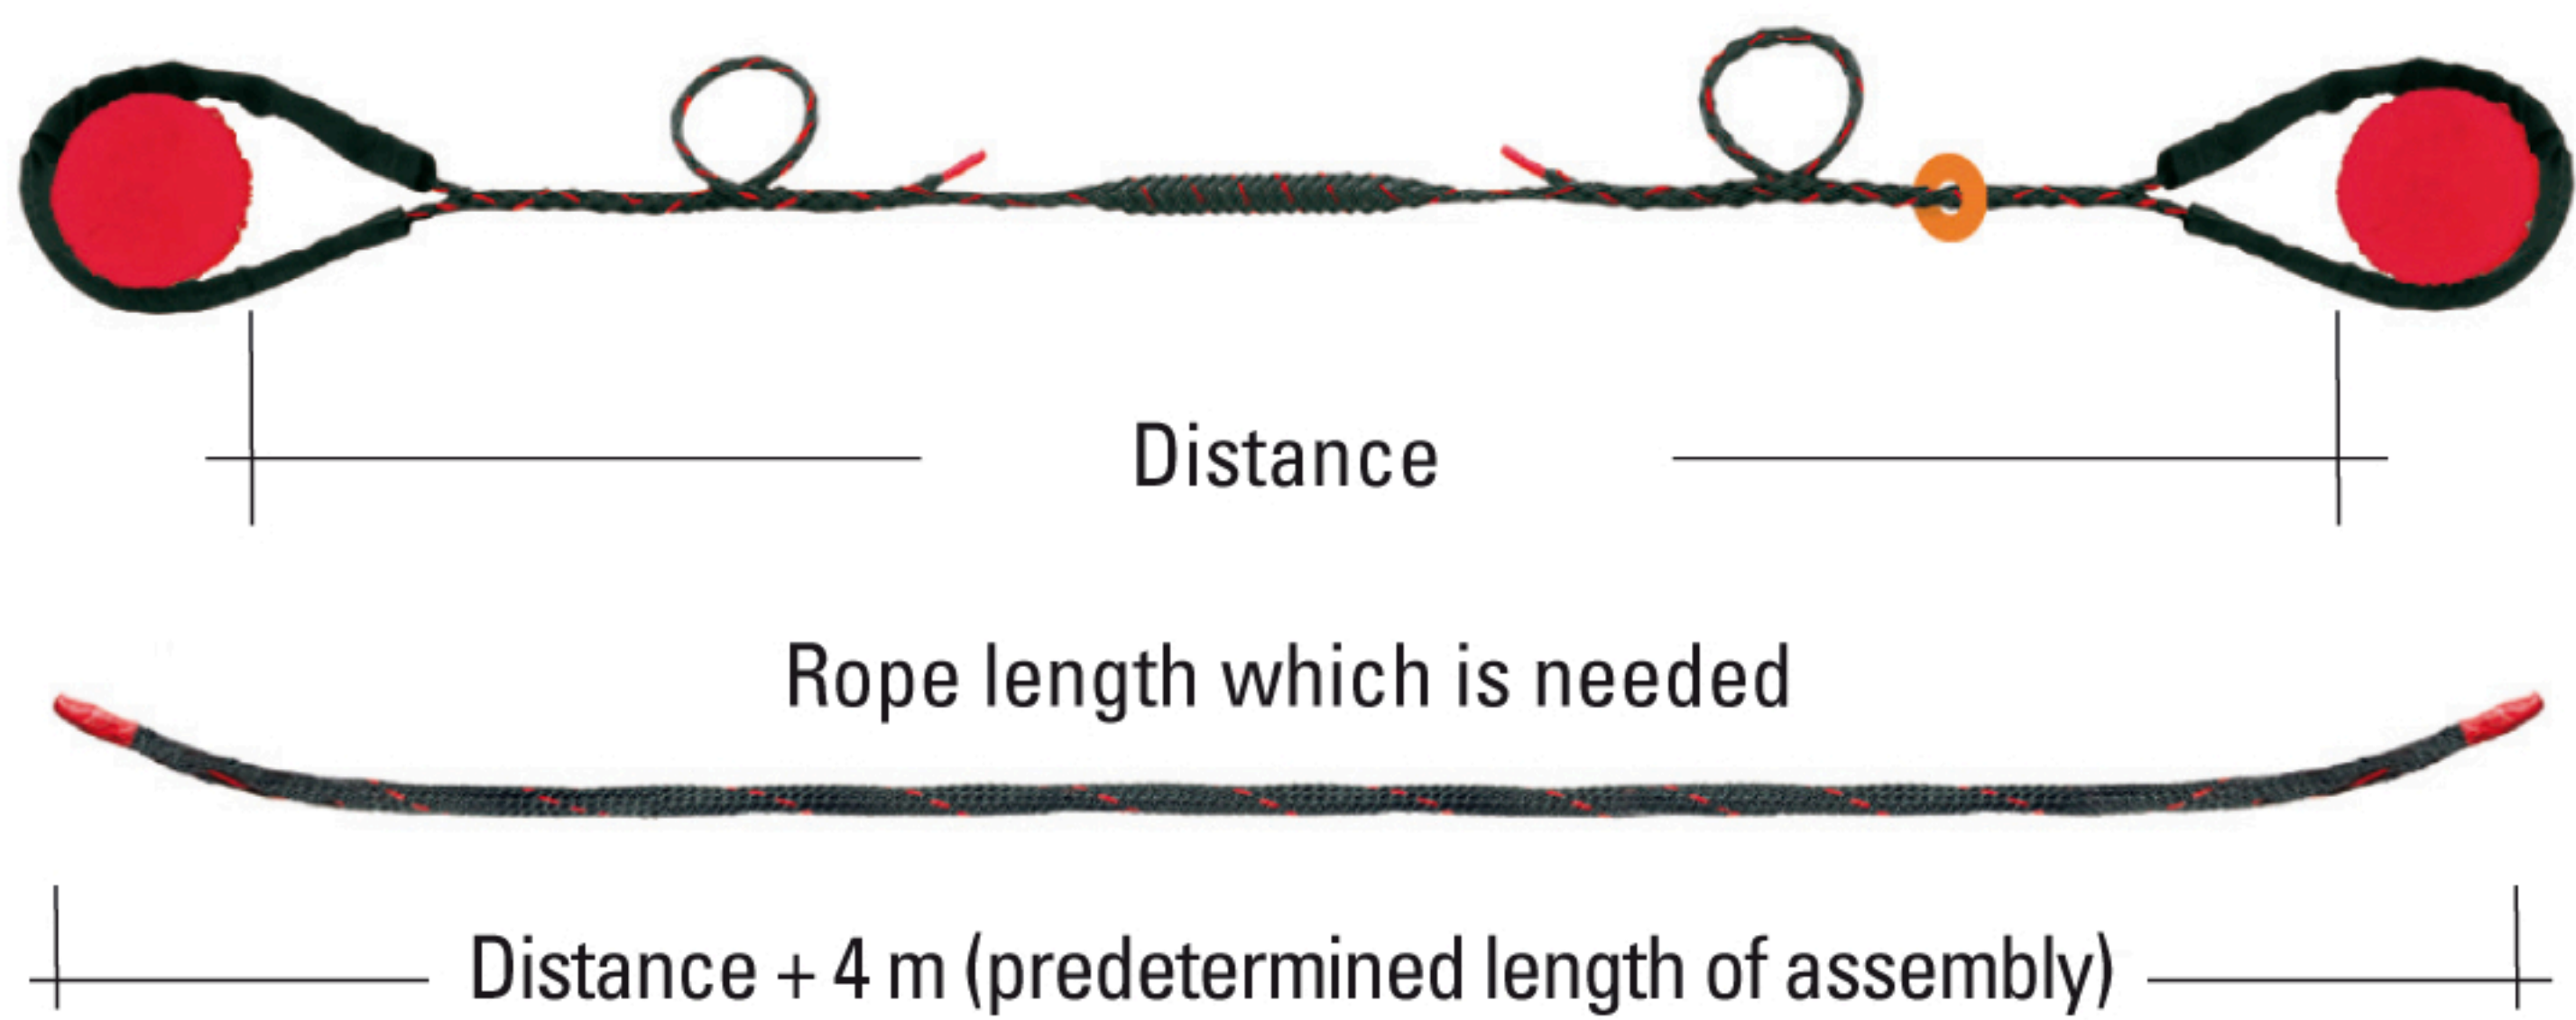


■ **Insertion position of the expansion insert:**



■ **Length of anti-abrasion hose = circumference of the branch**

■ **Length distance of a safe QuicksplICE**

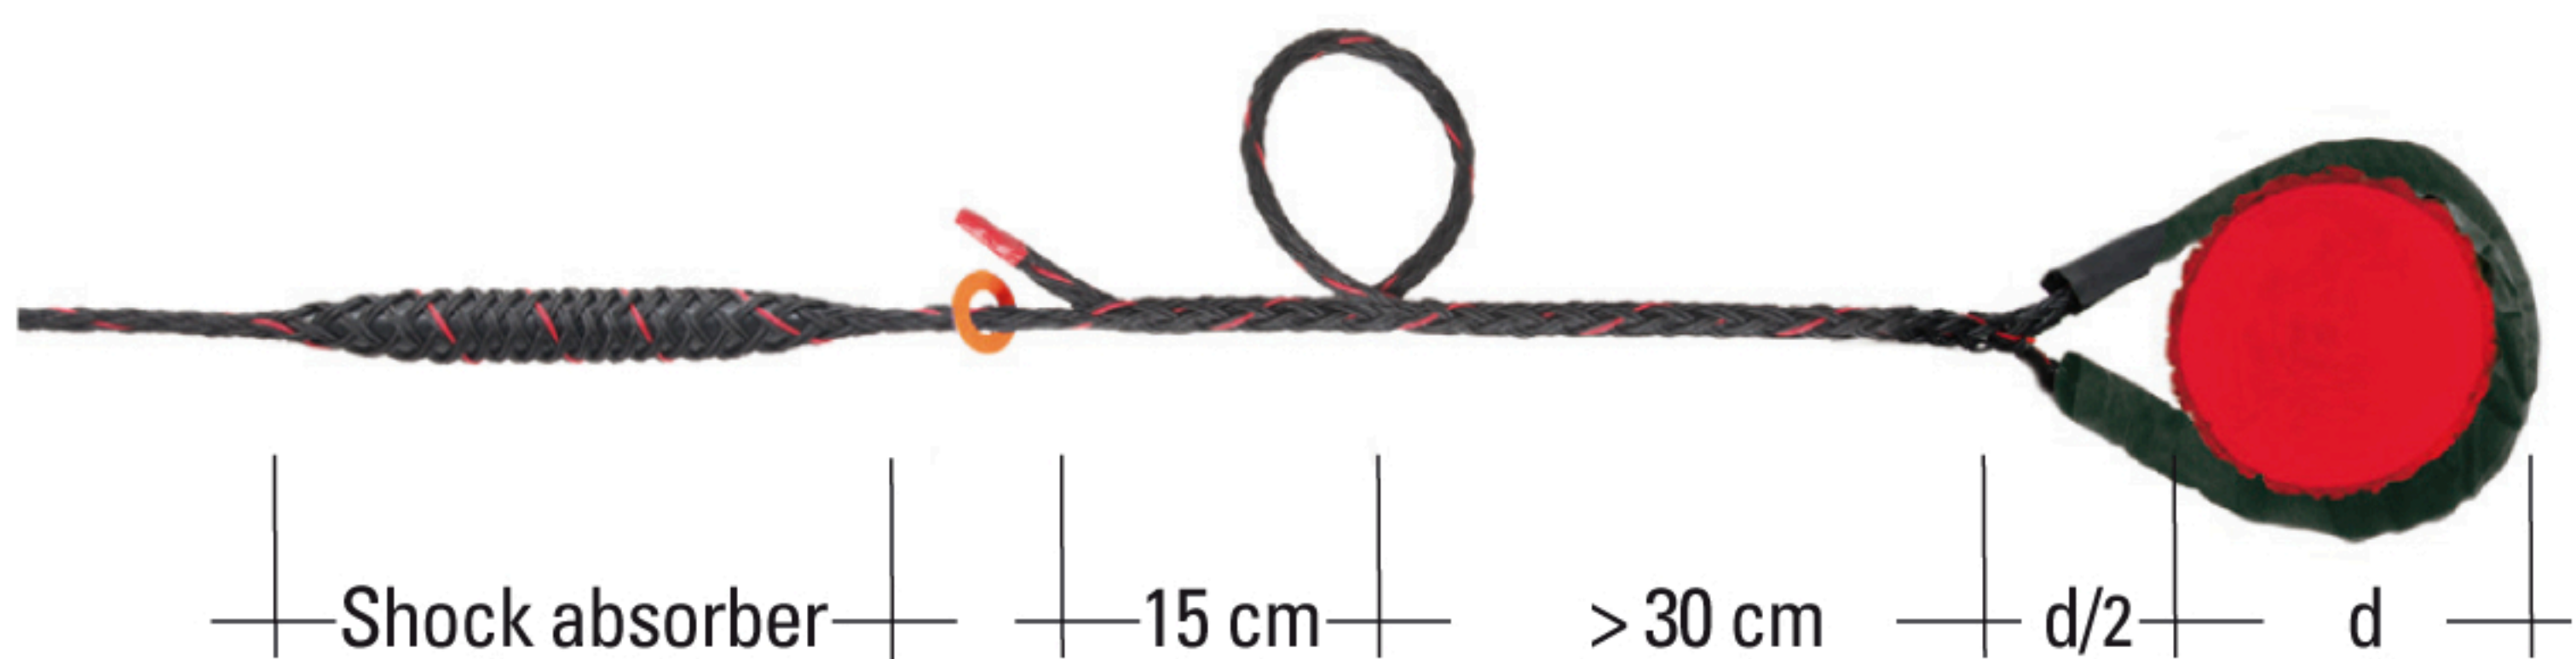

■ **Insertion position of the shock absorber: arbitrarily on free distance of the rope**

